 


EMERGENCY SENSORS

Light Sensing and Current Sensing Emergency Lamp Monitoring Sensors

 
Light Sensor (Tube Mounted)

- Connection**
- Clips directly to lamp tube, T5 and T8 clips supplied
- Operation**
- Connects to any input of any Lighting Control Module
 - Measures lamp light output
 - Supplies information on the condition/health of the lamp

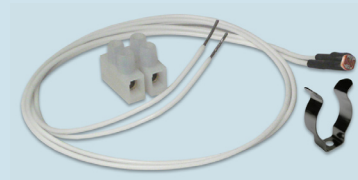


Light Sensor (Housing Mounted)

- Connection**
- Mounts in to a pre-drilled 8.5mm fixing hole
 - Normally factory fitted
- Operation**
- Connects to any input of any Lighting Control Module
 - Measures lamp light output
 - Supplies information on the condition/health of the lamp

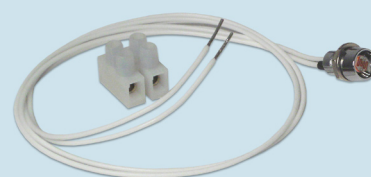

Fluorescent Lamp Current Sensor

 - Connection**
- Power feed to an emergency lamp passed through coil
 - Normally factory fitted
- Operation**
- Connects to any input of any Lighting Control Module
 - Measures current flow to an emergency lamp
 - Supplies information on the condition of the emergency power supply

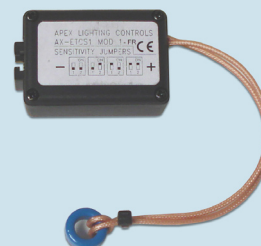

LED Current Sensor

- Connection**
- Power feed from inverter to LED fitting is fed via sensor
 - Connects to any input of any Lighting Control Module
- Operation**
- Measures current flow to an emergency LED fitting
 - Supplies information on the condition of the emergency power supply



Low Voltage Current Sensor

- Connection**
- Power feed from battery to inverter is fed via the sensor coil
 - Connects to any input of any Lighting Control Module
- Operation**
- Measures the current used to drive the battery pack
 - Supplies information on the condition of the emergency power supply



Greengate

20 Greenhill Crescent, Watford Business Park,
Watford, Herts, WD18 8JA, UK
T: +44 (0)1923 495495 F: +44 (0)1923 228796
E: info@greengatecontrols.co.uk www.greengatecontrols.co.uk

Distribuidor: **SISLITE**

R. Sá de Figueiredo 6 - C
2790-233 Carnaxide
Telef. 21 417 76 21 Fax. 21 030 00 31
Web: www.sislite.pt - email: geral.sislite@sislite.pt