



Mechanical Fixing

 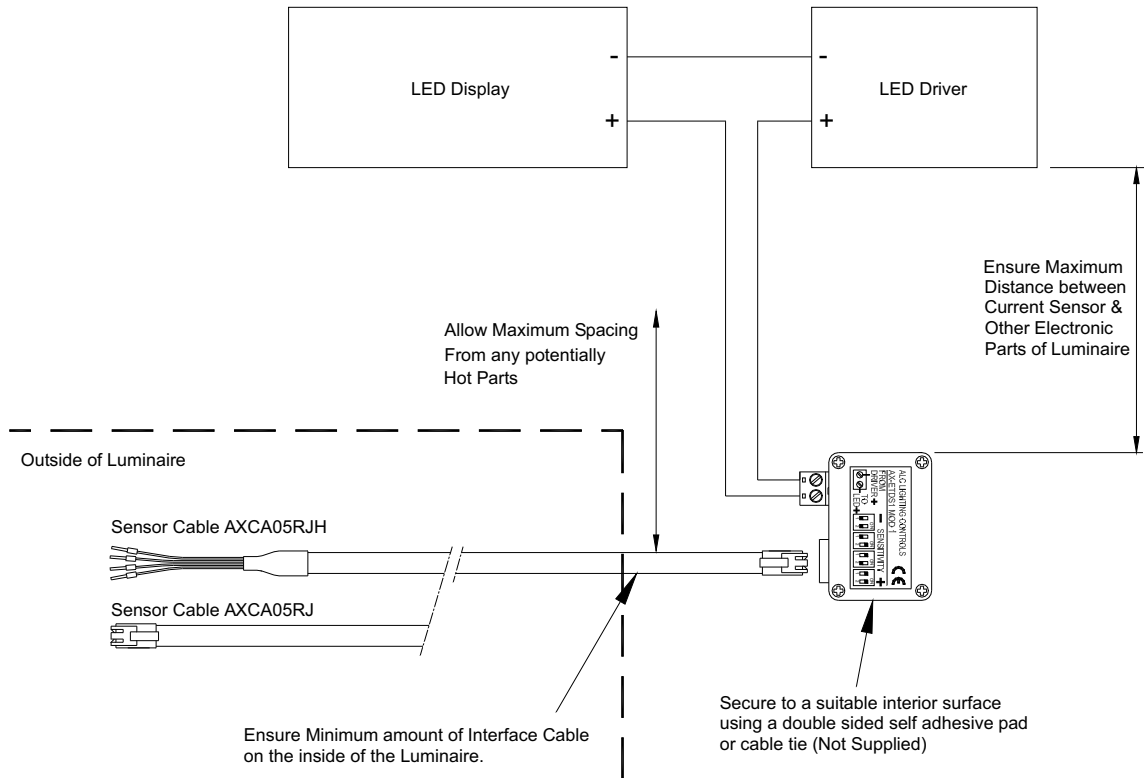


Wiring & Termination

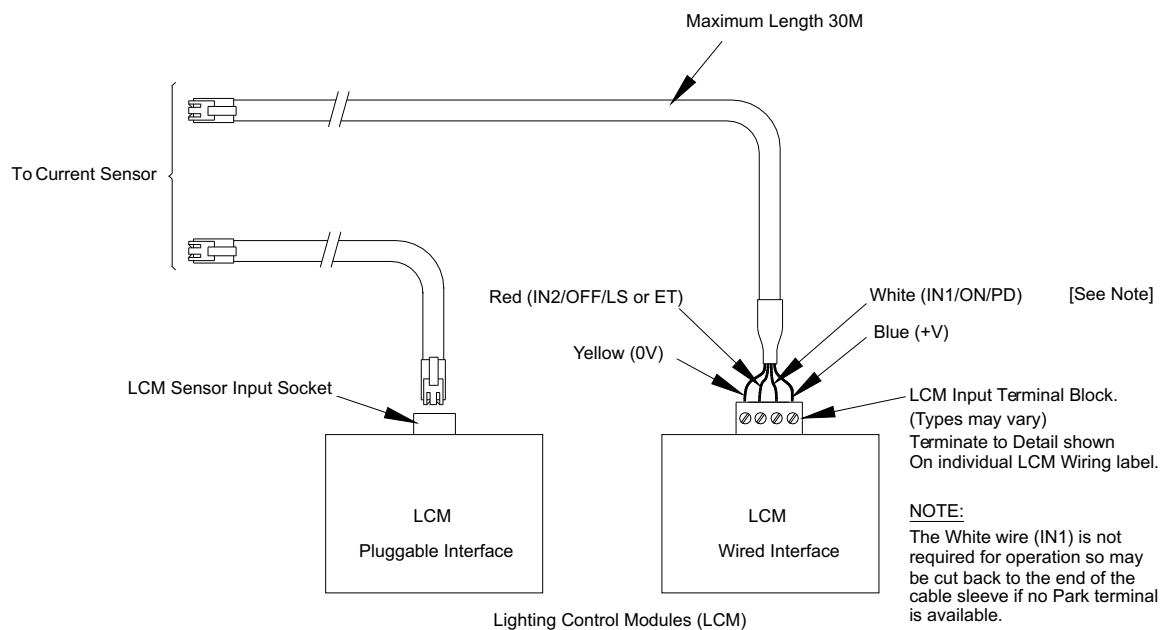


Sensitivity Set Up


The sensitivity of the LED current sensor can be set to four different levels by setting the DIL switch accessed on the side of the unit, setting as below,




Low Sensitivity

 

Medium Low Sensitivity

 

Medium High Sensitivity

 

High Sensitivity

Note:

The setting is dependant upon the type of fitting it is connected to, the position of the sensor coil and the DIL switch setting should be set as advised by ALC Lightng Controls.